
ImagelR® 8300

High-end Thermography Camera




INFRATEC.

Europe's leading specialist for infrared sensors and measurement technology

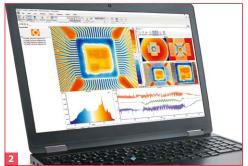

Cooled FPA photon detector with (640 × 512) IR pixels Full-frame rate up to 205 Hz, GigE Vision compatible Snapshot detector, internal trigger interface Extremely short integration times in the microsecond range Pixel size with microscopic lens less than 2 µm Thermal resolution better than 0.02 K

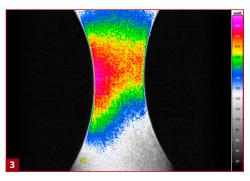

- 1) ImageIR® 8300 with interchangeable lenses from InfraTec
- 2) Software IRBIS® 3
- 3) Thermal Stress Analysis with Lock-in Thermography



www.InfraTec.eu www.InfraTec-infrared.com



Spectral range	(2.0 5.7) μm	
Pitch	15 μm	
Detector	MCT or InSb	
Detector format (IR pixels)	(640×512)	
Image aquisition	Snapshot	
Readout mode	ITR/IWR	
Aperture ratio	f/3.0 or f/2.0	
Detector cooling	Stirling cooler	
Temperature measuring range	(-40 1,500) °C, up to 3,000 °C*	
Measurement accuracy	±1°C or ± 1%	
Temperature resolution @ 30 °C	MCT: Better than 0.02 K	
	InSb: Better than 0.025 K	
Frame rate (full/half/quarter/sub frame)*	MCT: Up to 151/540/1,520/2,807 Hz	
	InSb: Up to 205/570/1,020/5,000 Hz	
Window mode	Yes	
Focus	Manual, motorised or automatically*	
Dynamic range	Up to 16 bit*	
Integration time	(0.6 20,000) μs	
Rotating filter wheel*	Up to 5 positions	
Rotating aperture wheel*	Up to 5 positions	
Interfaces	GigE, CAMLink*, HDMI*	
Trigger	3 IN/2 OUT, TTL	
Tripod adapter	1/4" and 3/8" photo thread, $2 \times M5$	
Power supply	24 V DC, wide-range power supply (100 240) V AC	
Storage and operation temperature	(-40 70) °C, (-20 50) °C	
Protection degree	IP54, IEC 60529	
Dimensions; weight	MCT: (241 × 120 × 160) mm*; InSb: (235 × 120 × 160) mm*	
	3.3 kg (without lens)	
Further functions	Multi Integration Time*	
Analysis and evaluation software	IRBIS® 3, IRBIS® 3 view, IRBIS® 3 plus*, IRBIS® 3 professional*, IRBIS® 3 control*, IRBIS® 3 online*,	
	IRBIS® 3 process*, IRBIS® 3 active*, IRBIS® 3 mosaic*, IRBIS® 3 vision*	

* Depending on model

With its ImageIR® 8300, InfraTec introduces another top level thermographic camera model belonging to the ImageIR® highend camera series. The implementation of a (640 × 512) IR pixel MWIR detector allows 205 Hz full-frame real-time imaging without compromising any thermal accuracy. The ImageIR® 8300 and its cooled focal-plane array photon detector reach an outstanding thermal resolution better than 0.02 K. The new version was developed for most demanding operations in research and development and process monitoring fields. Its modular structure consisting of the optical, detector and interface section, makes the camera easily compatible to the related applications and for tailored configurations. An integrated trigger interface guarantees a repeatable high-precision triggering of quick procedures. Multiple configurable digital inputs and outputs serve as control ports for the camera or as generator of digital control signals for external devices.

The optical channel consists of the **exchangeable infrared lens** as well as application-specific apertures, filters and reference elements. All exchangeable ImageIR® 8300 standard lenses can be **equipped with**

a motorised focus unit easily operable from the camera's application software. It allows precise, fast and remotely controlled motorised focusing and is part of the autofocus function.

Lenses	Focal length (mm)	FOV (°)	IFOV (mrad)
Wide-angle lens	12	(43.6 × 35.5)	1.3
Standard lens	25	(21.7 × 17.5)	0.6
Telephoto lens	50	(11.0 × 8.8)	0.3
Telephoto lens	100	(5.5 × 4.4)	0.15
Telephoto lens	200	(2.7 × 2.2)	0.08

Macro and Microscopic lenses	Minimum object distance (mm)	Object size (mm)	Pixel size (μm)
Close-up for telephoto lens 50 mm	300	(58×46)	90
Close-up for telephoto lens 100 mm	500	(48×38)	75
Microscopic lens M=1.0×	40/195/300	(9.6 × 7.7)	15
Microscopic lens M=3.0×	22	(3.2×2.6)	5
Microscopic lens M=8.0×	14	(1.2×0.96)	1.9

Headquarters

InfraTec GmbH

Infrarotsensorik und Messtechnik

Gostritzer Str. 61 – 63

01217 Dresden/GERMANY Phone +49 351 871-8630

Fax +49 351 871-8727

E-mail thermo@InfraTec.de

USA office

InfraTec infrared LLC

5048 Tennyson Pkwy. Plano TX 75024/USA

Phone +1 844-226-3722 (toll free) E-mail thermo@InfraTec-infrared.com